



MIDI OUTPUT

BY DEFAULT, THE PL-1 SENDS MESSAGES OUT ON ON MIDI CHANNELS 1-4. PRESSING THE DECK BUTTON SWITCHES THE PL-1 BETWEEN THE 4 CHANNELS IN SEQUENTIAL ORDER..

WHEN USING THE CHANNEL CHANGER APP, IT IS POSSIBLE TO SWITCH BETWEEN GROUPS OF CHANNELS. IF HH=0, THEN THE PL-1 PAGES BETWEEN CHANNELS 1-4. IF HH=1 IS SELECTED, THEN THE PL-1 PAGES BETWEEN CHANNELS 5-8, AND SO ON.

LED FEEDBACK

TO DRIVE THE LED FOR A SPECIFIC CONTROL, SEND THE OUTPUT MESSAGE FOR THAT CONTROL BACK TO THE PL-1.

LAST BYTE VALUES BELOW CONTROL LED STATE.

BUTTONS - 00 - "OFF" / 01 - ON SOLID / 02 - ON BLINKING

ENCODER RINGS - RANGE IS 01 THRU 16

PITCH METER - RANGE IS 01 THRU 16

CMD PL-1 MIDI MAP